



Schema di funzionamento cappa Modello 1200–1500–1800 F.A.

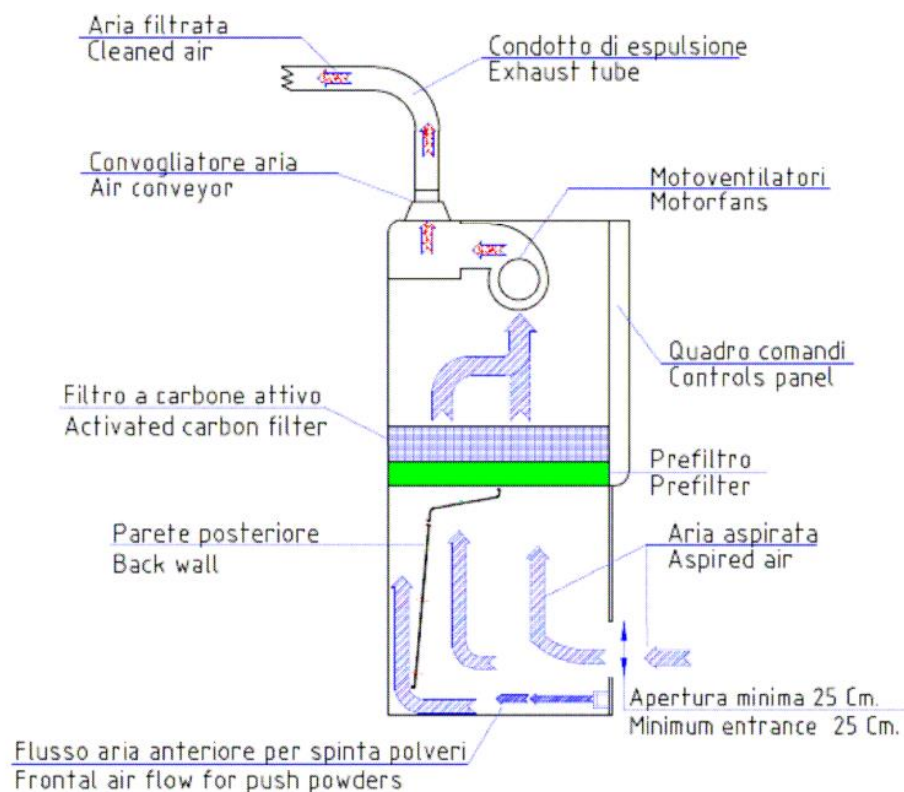

Modello 1200/R F.A. –1500/R F.A. –1800/R F.A.

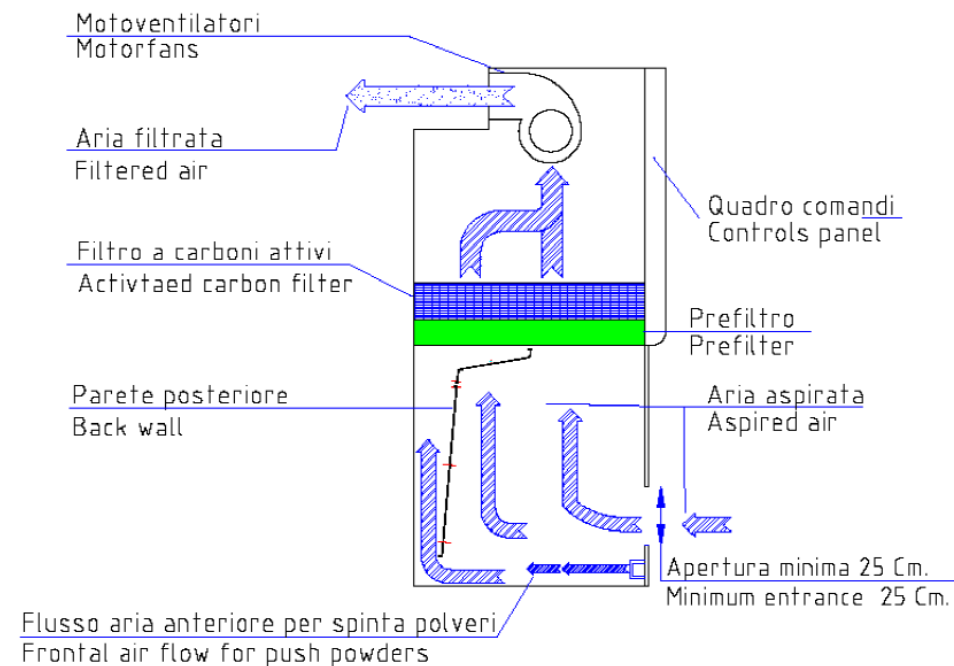

Modello 1200 F.A. –1500 F.A. –1800 F.A.